## INSTALLATION INSTRUCTIONS FLEXIBLE DROPPER TYPE SHP4 Edition 2014/03



### Elements of a SHP4 flexible dropper:

- 1x Cable dropper clamp type SHP4
- 1x Cable dropper clamp type SKTF 4 adjustable

#### Accessories for Installation of the FLURY Flexible Dropper type SHP4:

- Torque wrench 25 Nm (Nut 17 mm)
- Wire cutting pliers
- Ring spanner 17 mm

- Hexagonal pressing tool (article number 413.590.691)
- Crimping die KZ 11 AF for 10mm2 cable
  - (item no. 690.102.005)

#### Positioning

 Replacement of of already mounted flexible droppers Mark the position of the cable dropper clamps on the catenary (messenger wire) cable and the contact wire with a waterproof marker.
 Image: Delta and the contact wire with a waterproof marker.

 Please refer to our Positioning Guide
 Image: Delta and the compressed delivered cable dropper clamp type SHP4 provisionally at the catenary (messenger wire) cable at the marked position.
 Image: Delta and the catenary (messenger wire) cable. Tighten the bolt with a torque wrench of 25 Nm.

 Image: Delta and the catenary (messenger wire) cable at the marked position.
 Image: Delta and the catenary (messenger wire) cable. Tighten the bolt with a torque wrench of 25 Nm.

## INSTALLATION INSTRUCTIONS FLEXIBLE DROPPER TYPE SHP4 Edition 2013/04

**3.** Temporary installation of the second cable dropper clamp at the contact wire right under the already installed clamp at the catenary (messenger wire) cable at the marked position.




**5.** Install the cable dropper clamp definitively at the contact wire. Tighten the bolt with a torque wrench of 25 Nm.



7. Cut the overlength of dropper wire.

**4.** Definite adjustment of SHP4. Pull down the cable until you reach a measurement of 120mm (4<sup>3</sup>/<sub>4</sub> In).

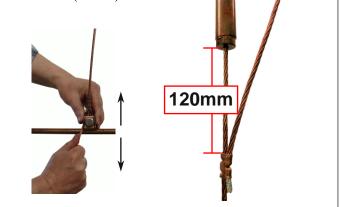

**6.** Compress the cable dropper clamp.



# **Caution! Danger of accident if these points are not observed:**

- A catenary with a temporary hanger must not be used with a pantograph.
- A temporarily mounted hanger will not be current-resistant.
- The hanger has to be mounted by qualified employees.

Arthur Flury AG rejects responsibility for any damage caused by not observing this installation instruction.

