
Installation instruction

V 2022/10

Contact wire splice fitting SK

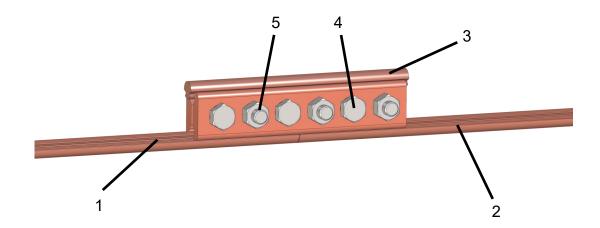

Splice fitting with piece of contact wire in the upper part.

Tools:

- 1 Metal saw, art. no. 656.000.002
- 1 File
- 1 Wire brush
- 1 Torque wrench 17 mm (50 Nm), art. no. 655.114.000
- 1 Ring spanner 17 mm, art. no. 600.001.029

Installation:

- 1. Cut both ends of the contact wires [1] and [2] with a metal cutting saw in order to have a rectangular and even cut with a smooth surface.
- 2. Clean both ends with a wire brush to ensure a proper electrical connection.
- 3. Place the splice fitting on the two ends of the contact wire [1] [2] so both ends meet exactly in the middle of the splice. Make sure, that the teeth of the splice fit properly in the groove of the contact wire over the full length.
- 4. Cut a piece of contact wire [3] and insert it upside down into the splice fitting. The contact wire piece must have the same properties as contact wires [1] and [2].
- 5. Tighten the bolts [4] with a torque of **50 Nm**, beginning from the centre to the outside of the splice.
- 6. Re-tighten all bolts [4] in the same order two times. This ensures that the splice teeth can properly grip and settle in the contact wire.
- 7. If the contact wire splice fitting has nuts [5], these must also be tightened with **50 Nm** after tightening the bolts [4]. When tightening the counter nuts [5], counter the bolts [4] with a wrench.
- 8. In case the both contact wires are not worn equally: even out the contact wire plane with a file to get a smooth transition from one contact wire to the other.

Arthur Flury AG | CH-4543 Deitingen | T: +41 32 613 33 66 | info@aflury.ch | www.aflury.ch



Installation instruction

Legal information

The product must only be operated by trained specialists.

The product can be permanently damaged by loads that exceed the maximum values. If the product is exposed to absolute maximum loading for an extended period, it may impair the product's reliability and life. Arthur Flur AG will not accept any liability in this case.

Arthur Flury AG will not accept any liability for incorrect use and use for applications other than those specified in these instructions.

If damage to the product is suspected, any use or operation must be stopped immediately. Arthur Flury AG will not accept any liability in the event of continued use despite suspected damage.

Due to the diverse ways in which this product can be used, the instructions for use represent a general guide only and do not constitute a guarantee of the product's suitability for use in a specific application. The user is responsible for checking the full product data and clarifying the product's suitability for the intended use. The user is responsible for the choice of product and compliance with all the safety regulations and warnings. Please contact Arthur Flury AG if you require additional product information.

Our products comply with the current legal requirements and regulations (including RoHS, REACH, WEEE) in the markets where we operate. Please refer to Arthur Flury AG's Code of Conduct, available on our website, for further information.

These instructions are intended to provide the customer with information and should not be supplied unless accompanied by the product. The products and information in this publication require appropriately trained specialist personnel. Despite the greatest care being taken, the instructions may contain inaccuracies or typographical errors for Arthur Flury AG will not accept any liability. Arthur Flury AG may amend the instructions at any time, without notice, in the interests of technical progress. The customer is responsible for downloading an up-to-date version of the instructions from Arthur Flury AG's website before using the product.

Any brand and product names used in these instructions are registered marks ® or trademarks™ of their respective owners.

Arthur Flury AG will not accept any liability for damage incurred as a result of failure to comply with these instructions.

Arthur Flury AG | CH-4543 Deitingen | T: +41 32 613 33 66 | info@aflury.ch | www.aflury.ch